

DropsA Air/Oil Injector

The DropsA air/oil injector consists of two components, the air/oil base and the metering element. It can be used as a stand alone assembly which supplies one bearing point or can be combined with additional assemblies to cover many points of air/oil lubrication.

The metering valves of the injector air/oil system displace a non-adjustable metered amount of oil to the air stream and thus to the bearing point through tubing. Each metering piston is spring returned upon venting of pressure from the main pump supply. The injector then re-charges for the next cycle.

There are four metering element sizes available:

- .05cc Part number: 1132385
- .10cc Part number: 1132386
- .15cc Part number: 1132387
- .25cc Part number: 1132388

The base part number is 1132390 and one base is needed for each element in the assembly.

All additional components needed to connect the various parts are included when ordering.

